



Powerware®

5115

500–1400 VA

Tower UPS

USER'S GUIDE

www.powerware.com

POWERWARE®

Class B EMC Statements

FCC Part 15

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and the receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

ICES-003

This Class B Interference Causing Equipment meets all requirements of the Canadian Interference Causing Equipment Regulations ICES-003.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Powerware and ABM are registered trademarks of Powerware Corporation.

©Copyright 2000–2004 Powerware Corporation, Raleigh, NC, USA. All rights reserved. No part of this document may be reproduced in any way without the express written approval of Powerware Corporation.

Requesting a Declaration of Conformity

Units that are labeled with a CE mark comply with the following harmonized standards and EU directives:


- ▶ Harmonized Standards: EN 50091-1-1 and EN 50091-2; IEC 60950 Third Edition
- ▶ EU Directives: 73/23/EEC, Council Directive on equipment designed for use within certain voltage limits
93/68/EEC, Amending Directive 73/23/EEC
89/336/EEC, Council Directive relating to electromagnetic compatibility
92/31/EEC, Amending Directive 89/336/EEC relating to EMC

The EC Declaration of Conformity is available upon request for products with a CE mark. For copies of the EC Declaration of Conformity, contact:

Powerware Corporation
Koskelontie 13
FIN-02920 Espoo
Finland
Phone: +358-9-452 661
Fax: +358-9-452 665 68

Special Symbols

The following are examples of symbols used on the UPS to alert you to important information:

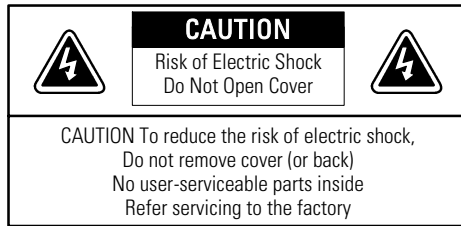

RISK OF ELECTRIC SHOCK - Indicates that a risk of electric shock is present and the associated warning should be observed.



CAUTION: REFER TO OPERATOR'S MANUAL - Refer to your operator's manual for additional information, such as important operating and maintenance instructions.



SAFETY EARTHING TERMINAL - Indicates the primary safety ground.



LOAD ON/OFF - Press the button with this symbol to energize the output receptacles (~ indicator illuminates) or to de-energize the output receptacles (~ indicator is off).



RJ-45 RECEPTACLE - For 230V units only: this receptacle provides network interface connections. Do not plug telephone or telecommunications equipment into this receptacle.



This symbol indicates that you should not discard the UPS or the UPS batteries in the trash. The UPS may contain sealed, lead-acid batteries. Batteries must be recycled.

Table of Contents

1 Powerware 5115 – One of the Best!	1
2 Safety Warnings	3
3 Installation	17
Inspecting the Equipment	17
Installing the UPS	17
UPS Rear Panels	19
4 Operation	23
Turning the UPS On	23
Starting the UPS on Battery	23
Turning the UPS Off	23
Standby Mode	24
UPS Front Panel	24
Initiating the Self-Test	24
5 Additional UPS Features	25
Voltage Configuration	25
Communication Options	26
USB Port	26
DB-9 Communication Port	27
Network Transient Protector	28
6 UPS Maintenance	29
UPS and Battery Care	29
Storing the UPS and Batteries	29
Replacing Batteries	30
Testing New Batteries	33
Recycling the Used Battery	34

7 Specifications	35
8 Troubleshooting	39
Audible Alarms and UPS Conditions	39
Silencing an Audible Alarm	39
Site Wiring Fault (120V Models Only)	40
Service and Support	43
9 Two-Year Limited Warranty	44
10 Extended Ten-Year Pro-Rated Limited Warranty	46

Chapter 1

Powerware 5115 – One of the Best!

The Powerware® 5115 uninterruptible power system (UPS) protects your sensitive electronic equipment from basic power problems such as power failures, power sags, power surges, brownouts, and line noise.

Power outages can occur when you least expect it and power quality can be erratic. These power problems have the potential to corrupt critical data, destroy unsaved work sessions, and damage hardware — causing hours of lost productivity and expensive repairs.

With the Powerware 5115, you can safely eliminate the effects of power disturbances and guard the integrity of your equipment. The Powerware 5115's flexibility to handle an array of network devices makes it the perfect choice to protect your LANs, servers, workstations, and other electrical equipment.

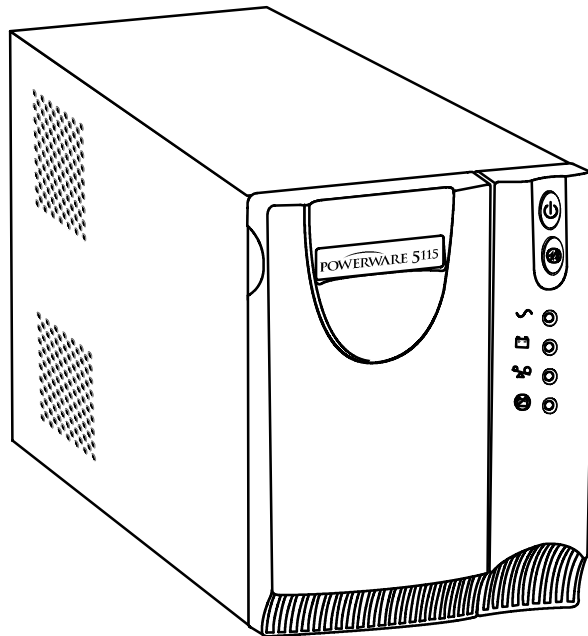


Figure 1. The Powerware 5115 UPS

Providing outstanding performance and reliability, the Powerware 5115's unique benefits include the following:

- ▶ Advanced Battery Management (ABM®) technology doubles battery service life, optimizes recharge time, and provides a warning before the end of useful battery life.
- ▶ Buck and Boost voltage regulation ensures consistent voltage to your load by correcting voltage fluctuations.
- ▶ Hot-swappable batteries simplify maintenance by allowing you to replace batteries safely without powering down the critical load.
- ▶ Start-on-battery capability allows you to power up the UPS even if utility power is not available.
- ▶ Advanced power management with the Powerware Software Suite CD for graceful shutdowns and power monitoring.
- ▶ Two standard communication options with a USB port and DB-9 serial port.
- ▶ Network Transient Protector guards your network communications equipment from surges. Low voltage models can also protect modems, fax machines, or other telecommunications equipment.
- ▶ The Powerware 5115 is backed by worldwide agency approvals.

Read the following precautions before you install the UPS.

IMPORTANT SAFETY INSTRUCTIONS SAVE THESE INSTRUCTIONS

This manual contains important instructions that you should follow during installation and maintenance of the UPS and batteries. Please read all instructions before operating the equipment and save this manual for future reference.



DANGER

This UPS contains **LETHAL VOLTAGES**. All repairs and service should be performed by **AUTHORIZED SERVICE PERSONNEL ONLY**. There are **NO USER SERVICEABLE PARTS** inside the UPS.



WARNING

- ▶ This UPS contains its own energy source (batteries). The output receptacles may carry live voltage even when the UPS is not connected to an AC supply.
- ▶ For 220–240V models, the output receptacles may remain electrically live. If the input power source in your application is wired line-to-neutral (as in most European applications), the voltage to the output receptacles is 0V. With line-to-line input wiring, the voltage to the output receptacles is 110–120V (measured from line-to-ground or line-to-neutral, depending on the UPS wiring).
- ▶ Do not remove or unplug the input cord when the UPS is turned on. This removes the safety ground from the UPS and the equipment connected to the UPS.
- ▶ To reduce the risk of fire or electric shock, install this UPS in a temperature and humidity controlled, indoor environment, free of conductive contaminants. Ambient temperature must not exceed 40°C (104°F). Do not operate near water or excessive humidity (95% max).
- ▶ To comply with international standards and wiring regulations, the total equipment connected to the output of this UPS must not have an earth leakage current greater than 1.5 milliamperes.



CAUTION

- ▶ The wall outlet must be within 2 meters of the equipment and accessible to the operator.
 - ▶ Batteries can present a risk of electrical shock or burn from high short-circuit current. The following precautions should be observed:
 - 1) Remove watches, rings, or other metal objects;
 - 2) Use tools with insulated handles;
 - 3) Do not lay tools or metal parts on top of batteries;
 - 4) Disconnect charging source prior to connecting or disconnecting battery terminals.
 - ▶ Proper disposal of batteries is required. Refer to your local codes for disposal requirements.
 - ▶ Never dispose of batteries in a fire. Batteries may explode when exposed to flame.
 - ▶ Never open or mutilate batteries. Released electrolyte is harmful to the skin and eyes, and may be extremely toxic.
 - ▶ Replace batteries with the same number and type of batteries as originally installed in the UPS.
-

Sikkerhedsanvisninger

VIGTIGE SIKKERHEDSANVISNINGER GEM DISSE ANVISNINGER DENNE BRUGERVEJLEDNING INDEHOLDER VIGTIGE SIKKERHEDSANVISNINGER

FARE



Denne UPS indeholder LIVSFARLIG HØJSPÆNDING. Alle reparationer og vedligeholdelse bør kun udføres af en AUTORISERET SERVICETEKNIKER. Ingen af UPS'ens indvendige dele kan repareres af brugeren.

ADVARSEL!



- ▶ Denne UPS indeholder egen energiforsyning (batterier). Udgangsstikkene kan lede strøm, selv når UPS'en ikke er tilsat en AC-energikilde.
- ▶ Netledningen må ikke fjernes og stikket må ikke trækkes ud, mens UPS'en er tændt. Dette fjerner sikkerhedsjorden fra UPS'en og fra det udstyr, der er sat til.
- ▶ Installér denne UPS i et temperatur- og fugtighedskontrolleret indendørsmiljø, frit for ledende forureningsstoffer for at formindske risikoen for brand og elektrisk stød. Rumtemperaturen må ikke overstige 40°C. UPS'en bør ikke betjenes nær vand eller høj fugtighed (maksimalt 95%).
- ▶ I overensstemmelse med internationale normer og bestemmelser for el-installation må det udstyr, der er forbundet til udgangen af denne UPS, tilsammen ikke overskride en jordafdelingspænding på mere end 1,5 milliamperere.

ADVARSEL



- ▶ Stikkontakten skal være højst 2 meter fra udstyret og skal være tilgængeligt til operatøren.
- ▶ Batterier kan udgøre en fare for elektrisk stød eller forbrændinger forårsaget af høj kortslutningsspænding. De korrekte forholdsregler bør overholdes.
- ▶ Korrekt bortskaffelse af batterier er påkrævet. Overhold gældende lokale regler for bortskaffelsesprocedurer.
- ▶ Skaf dig aldrig af med batterierne ved at brænde dem. Batterierne kan eksplodere ved åben ild.
- ▶ Batterierne bør aldrig åbnes eller skilles ad. Udløst elektrolyt er skadeligt for hud og øjne og kan være yderst giftigt.

Belangrijke Veiligheidsinstructies

BELANGRIJKE VEILIGHEIDSINSTRUCTIES BEWAAR DEZE INSTRUCTIES DEZE HANDLEIDING BEVAT BELANGRIJKE VEILIGHEIDSINSTRUCTIES



GEVAAR

Deze UPS bevat LEVENSGEVAARLIJKE ELEKTRISCHE SPANNING. Alle reparaties en onderhoud dienen UITSLUITEND DOOR ERKEND SERVICEPERSONEEL te worden uitgevoerd. Er bevinden zich GEEN ONDERDELEN in de UPS die DOOR DE GEBRUIKER kunnen worden GEREpareerd.



- WAARSCHUWING**
- ▶ Deze UPS bevat zijn eigen energiebron (batterijen). De uitgangsaansluitingen kunnen onder spanning staan wanneer de UPS niet op een wisselstroom voeding is aangesloten.
 - ▶ Verwijder de ingang snoer niet of haal de stekker van de ingang snoer er niet uit terwijl de UPS aan staat. Hierdoor zou de UPS en uw aangesloten apparatuur geen aardebeveiliging meer hebben.
 - ▶ Teneinde de kans op brand of elektrische schok te verminderen dient deze UPS in een gebouw met temperatuur- en vochtigheidsregeling te worden geïnstalleerd, waar geen geleidende verontreinigingen aanwezig zijn. De omgevingstemperatuur mag 40°C niet overschrijden. Niet gebruiken in de buurt van water of bij zeer hoge vochtigheid (max. 95%).
 - ▶ Om aan de internationale normen en bedradingsvoorschriften te voldoen mag de gehele apparatuur die op de uitgang van deze UPS is aangesloten, geen aardlekstroom van meer dan 1,5 milliampère hebben.
-



- OPGELET**
- ▶ De hoofdvoedingcontactdoos moet zich op minder dan 2 meter vande apparatuur bevinden en makkelijk bereikbaar zijn voor de gebruiker.
 - ▶ Batterijen kunnen gevaar voor elektrische schok of brandwonden veroorzaken als gevolg van un hoge kortsluitstroom. Volg de desbetreffende aanwijzingen op.
 - ▶ De batterijen moeten op de juiste wijze worden opgeruimd. Raadpleeg hiervoor uw plaatselijke voorschriften.
 - ▶ Nooit batterijen in het vuur gooien. De batterijen kunnen ontploffen.
 - ▶ Nooit batterijen openen of verminken. Vrijkomend elektrolyt is schadelijk voor de huid en ogen, en kan uiterst giftig zijn.
-

Tarkeita Turvaohjeita

TÄRKEITÄ TURVAOHJEITA - SUOMI SÄILYÄ NÄMÄ OHJEET TÄMÄ OPAS SISÄLTÄÄ TÄRKEITÄ TURVAOHJEITA

VAARA



Tämä UPS sisältää HENGENVAARALLISIA JÄNNITTEITÄ. Kaikki korjaukset ja huollot on jätettävä VAIN VALTUUTETUN HUOLTOHENKILÖN TOIMEKSI. UPS ei sisällä MITÄÄN KÄYTTÄJÄN HUOLLETTAVIA OSIA.

VAROITUS



- ▶ Tämä UPS sisältää oman energialähteen (akuston). Ulostuloliittimissä voi olla jännite, kun UPS ei ole liitettynä verkkojännitteeseen.
- ▶ Älä poista tai irrota sisääntulojohtoa, kun UPS on kytkettynä. Tämä poistaa turvamaadoituksen UPS-laitteesta ja siihen liitetystä laitteistosta.
- ▶ Vähentääksesi tulipalon ja sähköiskun vaaraa asenna tämä UPS sisätiloihin, joissa lämpötila ja kosteus on säädettävissä ja joissa ei ole virtaa johtavia epäpuhtauksia. Ympäristön lämpötila ei saa ylittää 40 °C. Älä käytä lähellä vettä ja vältä kosteita tiloja (95 % maksimi).
- ▶ Kansainväliset normit ja johdotusmääräykset vaativat, että kaikkien tämän UPS-laitteen ulostulokytkentöjen yhteinen maavuotovirta ei ylitä 1,5 milliampeeria (mA).

VARO



- ▶ Päävirtapistokkeen täytyy olla 2 m:n säteellä laitteistosta ja käyttäjän saatavilla. UPS-laitteen virtakytkin ei eristä sisäosia virran saannilta.
- ▶ Akusto saattaa aiheuttaa sähköiskun tai syttyä tuleen, jos akusto kytketään oikosulkuun. Noudata asianmukaisia ohjeita.
- ▶ Akusto täytyy hävittää säädösten mukaisella tavalla. Noudata paikallisia määräyksiä.
- ▶ Älä koskaan heitä akkuja tuleen. Ne voivat räjähtää.
- ▶ Älä avaa tai riko akkua. Paljastunut elektrolyytti on vahingollinen iholle ja silmille ja voi olla erittäin myrkyllistä.

Consignes de sécurité

CONSIGNES DE SÉCURITÉ IMPORTANTES CONSERVER CES INSTRUCTIONS CE MANUEL CONTIENT DES CONSIGNES DE SÉCURITÉ IMPORTANTES

DANGER!



Cet onduleur contient des TENSIONS MORTELLES. Toute opération d'entretien et de réparation doit être EXCLUSIVEMENT CONFIEE A UN PERSONNEL QUALIFIE AGRÉÉ. AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR ne se trouve dans l'onduleur.

AVERTISSEMENT!



- ▶ Cet onduleur renferme sa propre source d'énergie (batteries). Les prises de sortie peuvent être sous tension même lorsque l'onduleur n'est pas branché sur le secteur.
- ▶ Ne pas retirer le cordon d'alimentation lorsque l'onduleur est sous tension sous peine de supprimer la mise à la terre de l'onduleur et du matériel connecté.
- ▶ Pour réduire les risques d'incendie et de décharge électrique, installer l'onduleur uniquement à l'intérieur, dans un lieu dépourvu de matériaux conducteurs, où la température et l'humidité ambiantes sont contrôlées. La température ambiante ne doit pas dépasser 40 °C. Ne pas utiliser à proximité d'eau ou dans une atmosphère excessivement humide (95 % max).
- ▶ Afin d'être conforme aux normes et règlements internationaux de câblage, le courant de fuite à la terre de la totalité du matériel branché sur la sortie de l'onduleur ne doit pas dépasser 1,5 mA.

ATTENTION!



- ▶ La prise principale secteur doit se trouver à moins de 2 mètres du matériel et être accessible à l'utilisateur.
- ▶ Les batteries peuvent présenter un risque de décharge électrique ou de brûlure par des courts-circuits de haute intensité. Prendre les précautions nécessaires.
- ▶ Une mise au rebut réglementaire des batteries est obligatoire. Consulter les règlements en vigueur dans votre localité.
- ▶ Ne jamais jeter les batteries au feu. L'exposition aux flammes risque de les faire exploser.
- ▶ Ne jamais ouvrir ou mutiler des batteries. L'électrolyte qui s'en échappe est nuisible à la peau et aux yeux et peut s'avérer extrêmement toxique.

Sicherheitswarnungen

WICHTIGE SICHERHEITSANWEISUNGEN AUFBEWAHREN. DIESES HANDBUCH ENTHÄLT WICHTIGE SICHERHEITSANWEISUNGEN.

WARNUNG



Die USV führt lebensgefährliche Spannungen. Alle Reparatur- und Wartungsarbeiten sollten nur von Kundendienstfachleuten durchgeführt werden. Die USV enthält keine vom Benutzer zu wartenden Komponente

ACHTUNG



- ▶ Diese USV ist mit einer eigenen Energiequelle (Batterie) ausgestattet. An den Ausgangssteckdosen kann auch dann Spannung anliegen, wenn die USV nicht an einer Wechselspannungsquelle angeschlossen ist.
- ▶ Das Eingangskabel nicht entfernen oder abziehen, während die USV eingeschaltet ist, weil hierdurch die Sicherheitserdung von der USV und den daran angeschlossenen Geräten entfernt wird.
- ▶ Um die Brand- oder Elektroschockgefahr zu verringern, diese USV nur in Gebäuden mit kontrollierter Temperatur und Luftfeuchtigkeit installieren, in denen keine leitenden Schmutzstoffen vorhanden sind. Die Umgebungstemperatur darf 40°C nicht übersteigen. Die USV nicht in der Nähe von Wasser oder in extrem hoher Luftfeuchtigkeit (max. 95 %) betreiben.
- ▶ Um internationale Normen und Verdrahtungsvorschriften zu erfüllen, dürfen die an den Ausgang dieser USV angeschlossenen Geräte zusammen einen Erdschlußstrom von insgesamt 1,5 Milliampere nicht überschreiten.

VORSICHT!



- ▶ Batterien können aufgrund des hohen Kurzschlußstroms Elektroschocks oder Verbrennungen verursachen. Folgende Vorkehrungen sollten getroffen werden, wenn Sie mit der Battery arbeiten: 1) Entfernen Sie Uhren, Ring und andere metallische Objekte; 2) Verwenden Sie Werkzeug mit isolierten Griffen.
- ▶ Die Batterien müssen ordnungsgemäß entsorgt werden. Hierbei sind die örtlichen Bestimmungen zu beachten.
- ▶ Batterien niemals verbrennen, da sie explodieren können.
- ▶ Öffnen oder beschädigen Sie nicht die Batterien, ausfließendes Elektrolyt ist schädlich für Haut und Augen.
- ▶ Falls Sie die Batterien austauschen, verwenden Sie bitte ausschließlich die gleiche Anzahl und die Batterietypen.



.....
.....
.....
.....



- ▶
.....
.....
.....
 - ▶
.....
.....
.....
 - ▶
.....
.....
.....
.....
.....
.....
.....
 - ▶
.....
.....
.....
-



- ▶
.....
.....
 - ▶
.....
.....
 - ▶
.....
-

Avvisi di sicurezza

IMPORTANTI ISTRUZIONI DI SICUREZZA CONSERVARE QUESTE ISTRUZIONI QUESTO MANUALE CONTIENE IMPORTANTI ISTRUZIONI DI SICUREZZA

PERICOLO



la TENSIONE contenuta in questo gruppo statico di continuità è LETALE. Tutte le operazioni di riparazione e di manutenzione devono essere effettuate ESCLUSIVAMENTE DA PERSONALE TECNICO AUTORIZZATO. All'interno del gruppo statico di continuità NON vi sono PARTI RIPARABILI DALL'UTENTE.

AVVERTENZA



- ▶ Questo gruppo statico di continuità contiene una fonte di energia autonoma (le batterie). Le prese di uscita possono condurre tensione energizzata quando il gruppo statico di continuità non è collegato con una fonte di alimentazione a corrente alternata.
- ▶ Non rimuovere nè scollegare il cavo di ingresso quando il gruppo statico di continuità è acceso poichè in tal modo si disattiverebbe il collegamento a terra di sicurezza del gruppo statico di continuità e dell'apparecchiatura ad esso collegata.
- ▶ Per ridurre il rischio di incendio o di scossa elettrica, installare il gruppo statico di continuità in un ambiente interno a temperatura ed umidità controllata, privo di agenti contaminanti conduttivi. La temperatura ambiente non deve superare i 40°C. Non utilizzare l'unità in prossimità di acqua o in presenza di umidità eccessiva (95% max).
- ▶ Per conformità con gli standard internazionali e con le norme in merito al cablaggio, tutta l'apparecchiatura collegata con l'uscita del gruppo statico di continuità non deve avere una corrente di dispersione di terra superiore a 1,5 milliampere.

ATTENZIONE



- ▶ La presa di alimentazione principale non deve trovarsi a oltre 2 metri dall'apparecchiatura e deve essere accessibile all'operatore.
- ▶ Le batterie possono presentare rischio di scossa elettrica o di ustioni provocate da alta corrente dovuta a corto circuito. Osservare le apposite istruzioni.
- ▶ Le batterie devono essere smaltite in modo corretto. Per i requisiti di smaltimento fare riferimento alle disposizioni locali.

- ▶ Non gettare mai le batterie nel fuoco poichè potrebbero esplodere se esposte alle fiamme.
 - ▶ Mai aprire nè mutilare le batterie poichè l'elettrolita da esse rilasciato è nocivo alla cute e agli occhi e può essere altamente tossico.
-

Viktig Sikkerhetsinformasjon



FARLIG

Denne UPS'en inneholder LIVSFARLIGE SPENNINGER. All reparasjon og service må kun utføres av AUTORISERT SERVICEPERSONALE. BRUKERE KAN IKKE UTFØRE SERVICE PÅ NOEN AV DELENE i UPS'en.



FARLIG

- ▶ Denne UPS'en har en egen energikilde (batterier). Stikkontaktene kan være strømførende selv om UPS'en ikke er tilsluttet en vekselstrømforsyning.
 - ▶ Strømforsyningskabelen må ikke fjernes eller trekkes ut når UPS'en er på, slik at ikke sikkerhetsjordingen fjernes fra UPS'en og det utstyret som er forbundet med den.
 - ▶ For å redusere fare for brann eller elektriske støt, bør denne UPS'en installeres i et innendørs miljø med kontrollert temperatur og luftfuktighet som er fritt for ledende, forurensende stoffer. Romtemperaturen må ikke overskride 40°C. Den må ikke brukes i nærheten av vann eller ved meget høy luftfuktighet (95% maks.).
 - ▶ Alt utstyr som er forbundet med utgangen av denne UPS'en må ikke ha en sterkere total lekkasjestrøm enn 1,5 milliampere for å være i overensstemmelse med internasjonale standarder og forkablingsbestemmelser.
-



FORSIKTIG

- ▶ Stikkkontakten må befinne seg innen 2 m fra utstyret og må være tilgjengelig for operatøren.
 - ▶ Batterier kan forårsake elektriske støt eller forbrenning på grunn av høy kortslutningsstrøm. Følg instruksene.
 - ▶ Batterier må fjernes på korrekt måte. Se lokale forskrifter vedrørende krav om fjerning av batterier.
 - ▶ Kast aldri batterier i flammer, da de kan eksplodere, hvis de utsettes for åpen ild.
 - ▶ Batterier må aldri åpnes eller ødelegges. Frigjorte elektrolytter er skadelige for hud og øyne og kan være ekstremt giftige.
-

Regulamentos de Segurança

INSTRUÇÕES DE SEGURANÇA IMPORTANTES GUARDE ESTAS INSTRUÇÕES ESTE MANUAL CONTÉM INSTRUÇÕES DE SEGURANÇA IMPORTANTES

CUIDADO



A UPS contém VOLTAGEM MORTAL. Todos os reparos e assistência técnica devem ser executados SOMENTE POR PESSOAL DA ASSISTÊNCIA TÉCNICA AUTORIZADO. Não há nenhuma PEÇA QUE POSSA SER REPARADA PELO USUÁRIO dentro da UPS.

ADVERTÊNCIA



- ▶ Esta UPS contém sua própria fonte de energia (baterias). Os receptáculos de saída podem conter voltagem ativa quando a UPS não se encontra conectada a uma fonte de alimentação de corrente alternada.
- ▶ Não remova ou desconecte o cabo de entrada quando a UPS estiver ligada. Isto removerá o aterramento de segurança da UPS e do equipamento conectado.
- ▶ Para reduzir o risco de incêndios ou choques elétricos, instale a UPS em ambiente interno com temperatura e umidade controladas e livres de contaminadores condutíveis. A temperatura ambiente não deve exceder 40°C. Não opere próximo a água ou em umidade excessiva (máx: 95%).
- ▶ Para estar de acordo com os padrões internacionais e os regulamentos de fiação, o equipamento total conectado à saída desta UPS não deve ter uma corrente de fuga à terra maior que 1,5 miliampères.

PERIGO



- ▶ O soquete de alimentação principal deve estar à no máximo dois metros do equipamento e acessível ao operador.
- ▶ As baterias podem apresentar o risco de choque elétrico, ou queimaduras provenientes de alta corrente de curto-circuito. Observe as instruções adequadas.
- ▶ Siga as instruções apropriadas ao desfazer-se das baterias. Consulte os códigos do local para maiores informações sobre os regulamentos de descarte de produtos.
- ▶ Nunca jogue as baterias no fogo, porque há risco de explosão.
- ▶ Nunca abra ou danifique as baterias. O eletrólito liberado é prejudicial à pele e aos olhos e pode ser extremamente tóxico.

Предупреждения по мерам безопасности

**ВАЖНЫЕ УКАЗАНИЯ ПО МЕРАМ БЕЗОПАСНОСТИ
СОХРАНИТЕ ЭТИ УКАЗАНИЯ
ДАННОЕ РУКОВОДСТВО СОДЕРЖИТ ВАЖНЫЕ УКАЗАНИЯ ПО
МЕРАМ БЕЗОПАСНОСТИ**

ОПАСНО



В данном ИБП имеются СМЕРТЕЛЬНО ОПАСНЫЕ НАПРЯЖЕНИЯ. Все работы по ремонту и обслуживанию должны выполняться ТОЛЬКО УПОЛНОМОЧЕННЫМ ОБСЛУЖИВАЮЩИМ ПЕРСОНАЛОМ. Внутри ИБП нет узлов, ОБСЛУЖИВАЕМЫХ ПОЛЬЗОВАТЕЛЕМ.

ПРЕДУПРЕЖДЕНИЕ



- ▶ Данный ИБП содержит собственные источники энергии (аккумуляторы). На выходных розетках может иметься напряжение, даже когда ИБП не подключен к сети переменного тока.
- ▶ Не отсоединяйте сетевой шнур и не извлекайте его вилку из розетки при включенном ИБП. При этом защитное заземление отключается от ИБП и от оборудования, подключенного к ИПБ.
- ▶ Для снижения опасности пожара или поражения электрическим током устанавливайте ИБП в закрытом помещении с контролируемой температурой и влажностью, в котором отсутствуют проводящие загрязняющие вещества. Температура окружающего воздуха не должна превышать 40°C. Не эксплуатируйте устройство около воды или в местах с повышенной влажностью (макс. 95%).
- ▶ Для обеспечения соблюдения требований международных стандартов и требований к разводке электрических цепей, суммарная величина тока утечки на землю всего оборудования, подключенного к выходу ИБП, не должна превышать 1,5 миллиампера.

ОСТОРОЖНО



- ▶ Аккумуляторы могут вызвать опасность поражения электрическим током или ожога от тока короткого замыкания. Соблюдайте соответствующие меры предосторожности.
- ▶ Необходимо соблюдать правила утилизации аккумуляторов. Обратитесь к местным нормативным актам за информацией о требованиях к утилизации.
- ▶ Никогда не бросайте аккумуляторы в огонь. Аккумуляторы могут взорваться под воздействием огня.

Advertencias de Seguridad

INSTRUCCIONES DE SEGURIDAD IMPORTANTES GUARDE ESTAS INSTRUCCIONES ESTE MANUAL CONTIENE INSTRUCCIONES DE SEGURIDAD IMPORTANTES

PELIGRO



Este SIE contiene VOLTAJES MORTALES. Todas las reparaciones y el servicio técnico deben ser efectuados SOLAMENTE POR PERSONAL DE SERVICIO TÉCNICO AUTORIZADO. No hay NINGUNA PARTE QUE EL USUARIO PUEDA REPARAR dentro del SIE.

ADVERTENCIA



- ▶ Este SIE contiene su propia fuente de energía (las baterías). Los receptáculos de salida pueden transmitir corriente eléctrica aun cuando el SIE no esté conectado a un suministro de corriente alterna (c.a.).
- ▶ No retire o desenchufe el cable de entrada mientras el SIE se encuentre encendido. Esto suprime la descarga a tierra de seguridad del SIE y de los equipos conectados al SIE.
- ▶ Para reducir el riesgo de incendio o de choque eléctrico, instale este SIE en un lugar cubierto, con temperatura y humedad controladas, libre de contaminantes conductores. La temperatura ambiente no debe exceder los 40°C. No trabaje cerca del agua o con humedad excesiva (95% máximo).
- ▶ Para cumplir con los estándares internacionales y las normas de instalación, la totalidad de los equipos conectados a la salida de este SIE no debe tener una intensidad de pérdida a tierra superior a los 1,5 miliamperios.

PRECAUCIÓN



- ▶ El tomacorriente de pared debe encontrarse dentro de los 2 metros de distancia del equipo y ser accesible para el operador.
- ▶ Las baterías pueden presentar un riesgo de descargas eléctricas o de quemaduras debido a la alta corriente de cortocircuito. Preste atención a las instrucciones correspondientes.
- ▶ Es necesario desechar las baterías de un modo adecuado. Consulte las normas locales para conocer los requisitos pertinentes.
- ▶ Nunca deseche las baterías en el fuego. Las baterías pueden explotar si se las expone a la llama.
- ▶ Nunca abra o mutile las baterías. El electrolito liberado es peligroso para la piel y los ojos, y puede ser extremadamente tóxico.

Säkerhetsföreskrifter

VIKTIGA SÄKERHETSFÖRESKRIFTER SPARA DESSA FÖRESKRIFTER DENNA BRUKSANVISNING INNEHÅLLER VIKTIGA SÄKERHETSFÖRESKRIFTER

FARA



Denna UPS-enhet innehåller LIVSFARLIG SPÄNNING. ENDAST AUKTORISERAD SERVICEPERSONAL får utföra reparationer eller service. Det finns inga delar som ANVÄNDAREN KAN UTFÖRA SERVICE PÅ inuti UPS-enheten.

VARNING



- ▶ Denna UPS-enhet har en egen energikälla (batterier). De utgående kontaktorna kan vara strömförande när UPS-enheten inte är ansluten till en växelströmkälla.
- ▶ Ta aldrig bort nätsladden när UPS-enheten är påslagen. Detta tar bort skyddsjordningen från både UPS-enheten och den anslutna utrustningen.
- ▶ Minska risken för brand eller elektriska stötar genom att installera denna UPS-enhet inomhus, där temperatur och luftfuktighet är kontrollerade och där inga ledande föroreningar förekommer. Omgivande temperatur får ej överstiga 40°C. Använd inte utrustningen nära vatten eller vid hög luftfuktighet (max 95 %).
- ▶ För att överensstämja med internationell standard och installationsföreskrifter får inte den totala utrustning som anslutits till uttagen på denna UPS-enhet ha läcksström som överstiger 1,5 milliampere.

VIKTIGT



- ▶ Huvudkontakten måste vara högst 2 meter från utrustningen och inom räckhåll för användaren.
- ▶ Batterierna kan ge elektriska stötar eller brännskador från hög kortslutningsström. Följ tillämpliga anvisningar.
- ▶ Batterierna måste avyttras enligt anvisningarna i lokal lagstiftning.
- ▶ Använda batterier får aldrig brännas upp. De kan explodera.
- ▶ Öppna aldrig batterierna eller ta isär dem. Utsläppt elektrolyt är skadlig för hud och ögon och kan vara mycket giftig.

This section explains:

- ▶ Equipment inspection
- ▶ UPS installation
- ▶ UPS rear panels

Inspecting the Equipment

If any equipment has been damaged during shipment, keep the shipping cartons and packing materials for the carrier or place of purchase and file a claim for shipping damage. If you discover damage after acceptance, file a claim for concealed damage.

To file a claim for shipping damage or concealed damage: 1) File with the carrier within 15 days of receipt of the equipment; 2) Send a copy of the damage claim within 15 days to your service representative.



NOTE *Check the battery recharge date on the shipping carton label. If the date has expired and the batteries were never recharged, do not use the UPS. Contact your service representative.*

Installing the UPS

The following steps explain how to install the UPS. Figure 2 shows a typical installation only. See “UPS Rear Panels” on page 19 for the rear panel of each model.

1. If you are installing power management software, connect your computer to the USB port or UPS communication port using the supplied cable (see page 26).



NOTE *If you need to change the factory-set defaults for the output voltage or input voltage range, see “Voltage Configuration” on page 25 before installing the UPS.*

2. On 230V models, plug the detachable power cord into the input connector on the UPS rear panel.

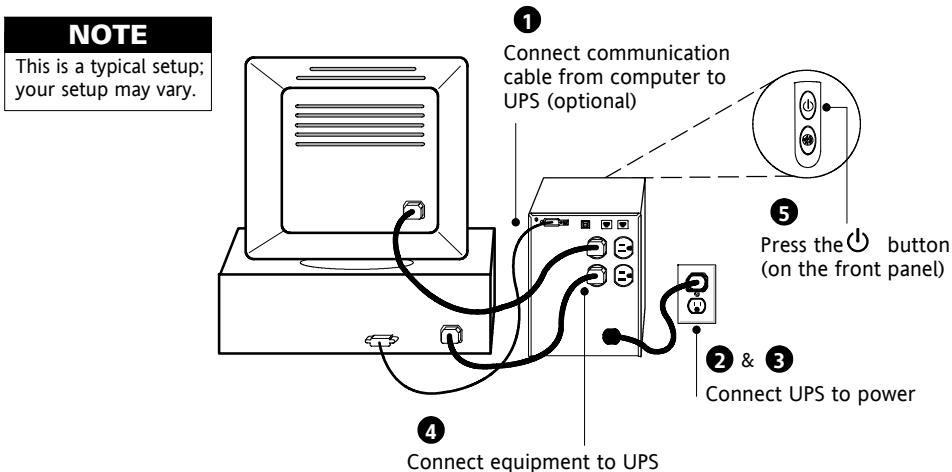


Figure 2. Typical UPS Installation (120V Model Shown)

3. Plug the UPS power cord into a power outlet.

Verify that the circuit has an upstream overcurrent protection of 15A for 120V models or 10A for 230V models.

4. Plug the equipment to be protected into the UPS output receptacles.



NOTE *DO NOT protect laser printers with the UPS because of the exceptionally high power requirements of the heating elements.*

5. Press and hold the button until you hear the UPS beep (approximately two seconds).

The indicator illuminates indicating that power is available from the UPS output receptacles. The UPS conducts a self-test and enters Normal mode.

If the alarm beeps or a UPS alarm indicator stays on, see Table 9 on page 40.



NOTE *The batteries charge to 90% capacity in approximately 3 hours. However, it is recommended that the batteries charge for 6 to 24 hours after installation or long-term storage.*

UPS Rear Panels

This section shows the rear panels of the Powerware 5115 models.

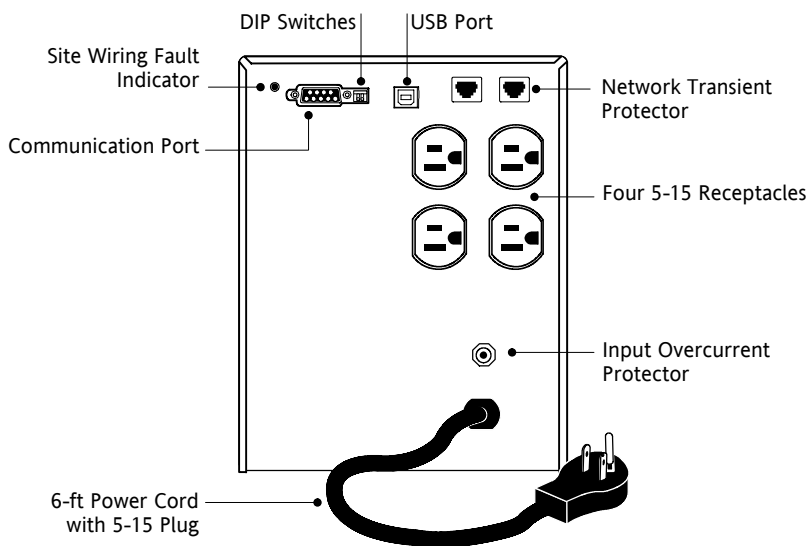


Figure 3. 500 VA, 120V Rear Panel

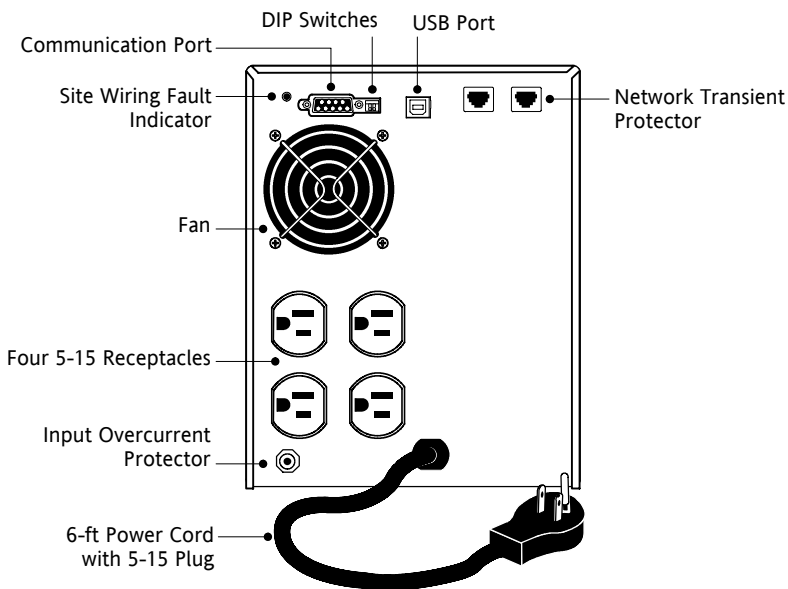


Figure 4. 750 VA, 120V Rear Panel

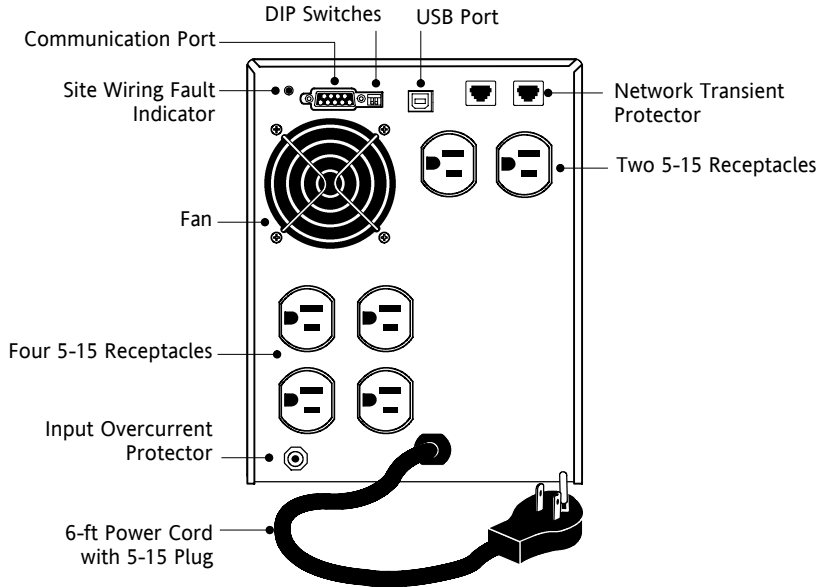


Figure 5. 1000 VA, 120V Rear Panel

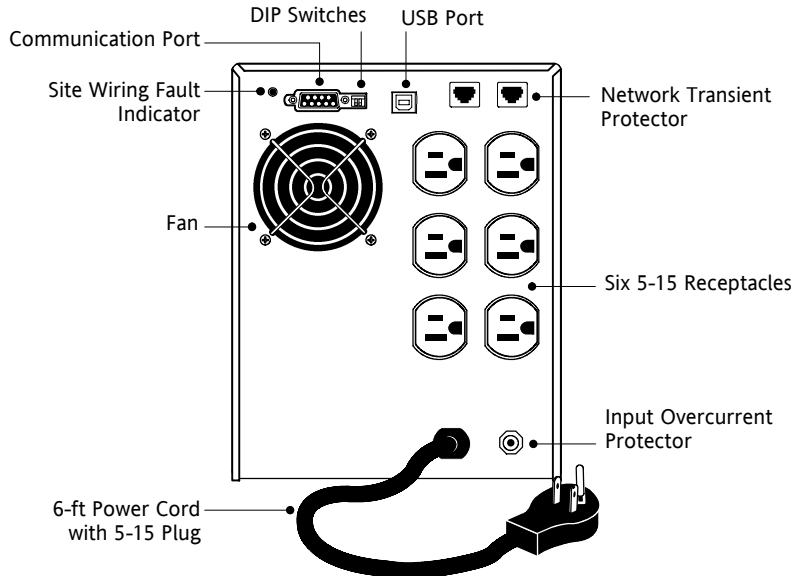


Figure 6. 1400 VA, 120V Rear Panel

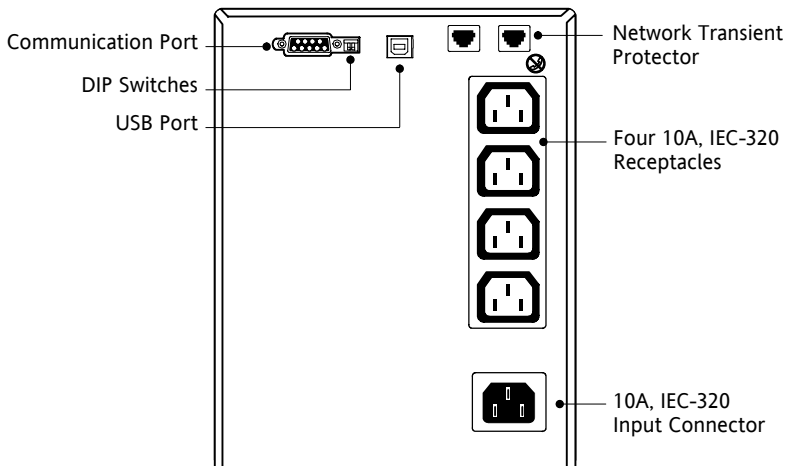


Figure 7. 500 VA, 230V Rear Panel

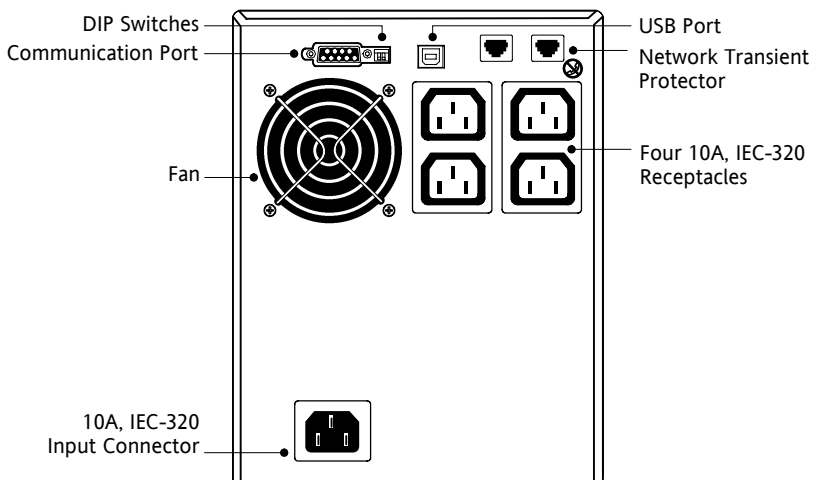


Figure 8. 750 VA, 230V Rear Panel

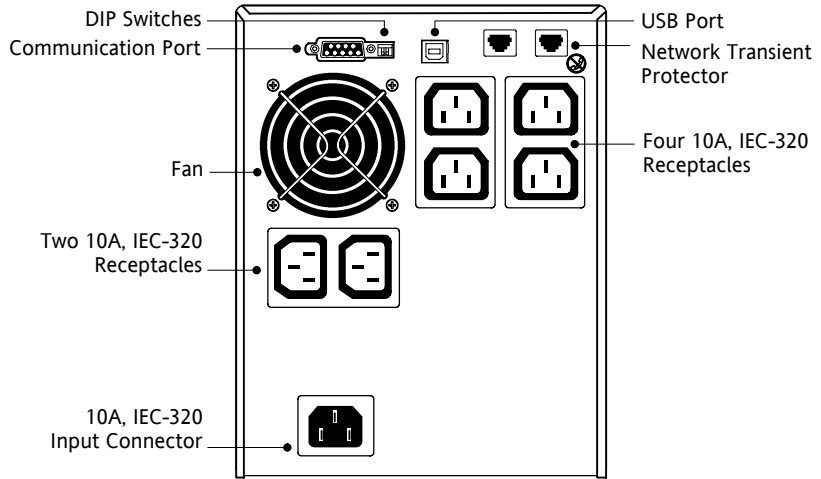


Figure 9. 1000 VA, 230V Rear Panel

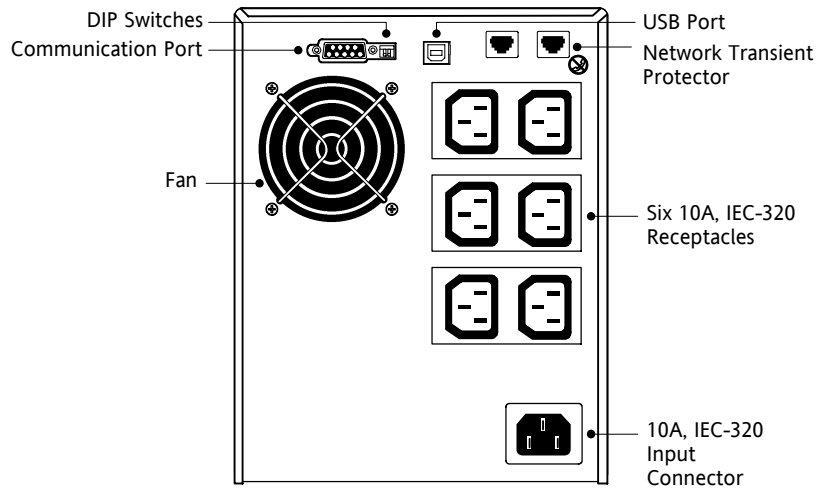




Figure 10. 1400 VA, 230V Rear Panel

Chapter 4 | Operation

This section describes:

- ▶ Turning the UPS on and off
- ▶ Starting the UPS on battery
- ▶ Standby mode
- ▶ The UPS front panel and indicators
- ▶ Initiating the self-test


Turning the UPS On

After the UPS is connected to a power outlet, the UPS enters Standby mode. To turn on the UPS, press and hold the  button until you hear the UPS beep (approximately two seconds). After the UPS is turned on, it conducts a self-test and enters Normal mode. The  indicator illuminates indicating that power is available from the UPS output receptacles.


Starting the UPS on Battery



NOTE *The UPS does not auto-detect the input frequency when starting on battery; the default is the last frequency used by the UPS.*

To turn on the UPS without using utility power, press and hold the  button for two seconds. The UPS supplies power to your equipment and goes into Battery mode. When the UPS starts on battery, it does not conduct a self-test to conserve battery power.

Turning the UPS Off

To turn off the UPS, press and hold the  button for two seconds and then unplug the UPS from the power outlet. If you do not unplug the UPS, it remains in Standby mode.

Standby Mode

When the UPS is turned off and remains plugged into a power outlet, the UPS is in Standby mode. All indicators are off and power is not available to your equipment. The battery recharges when necessary.



NOTE For 220–240V models, the output receptacles may remain electrically live (up to 110–120V). Unplug the UPS to ensure power is not available to the output receptacles.

UPS Front Panel

The UPS front panel indicates the UPS status and also identifies potential power problems. Figure 11 shows the UPS front panel indicators and controls.

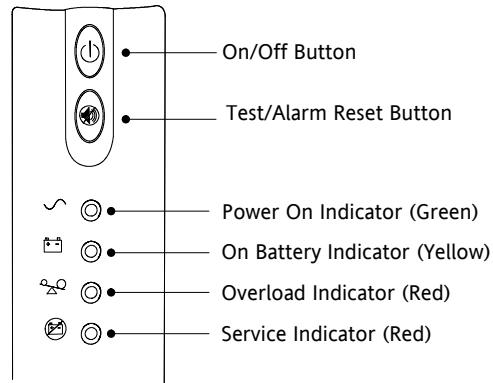



Figure 11. UPS Front Panel

If the alarm beeps or a UPS alarm indicator stays on, see Table 9 on page 40 to identify and correct the problem.

Initiating the Self-Test



NOTE The batteries must be fully charged and the UPS must not be in Battery mode to perform the self-test.



Press and hold the  button for three seconds to initiate the self-test. If the UPS finds a problem, an LED indicates where the problem is. For more information, see “Troubleshooting” on page 39.

This section describes:

- ▶ Changing the voltage configuration
- ▶ Using the USB or DB-9 communication port
- ▶ The Network Transient Protector

Voltage Configuration

The DIP switches on the rear panel of each unit (see Figure 12) are used to configure the output voltage and input voltage range.

1. The UPS must be completely shutdown.
To turn off the UPS, press and hold the  button for two seconds and then unplug the UPS from the power outlet.
2. Set the DIP switches according to the configurations in Table 1.
3. Plug the UPS power cord into a power outlet.
4. Press and hold the  button until you hear the UPS beep (approximately two seconds) to turn the UPS on.

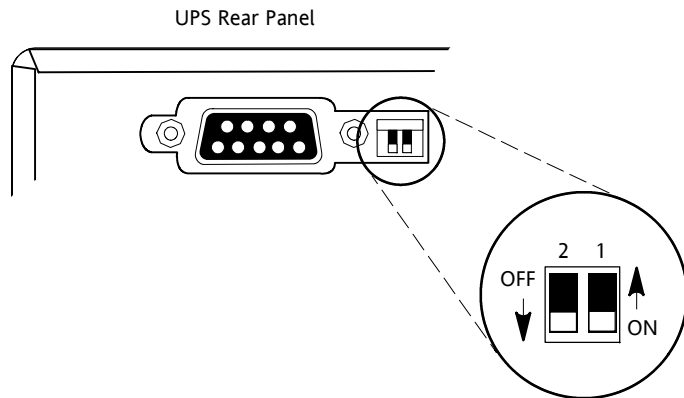


Figure 12. DIP Switches

Table 1. DIP Switch Settings

120V Models			
Output Voltage	Input Voltage Range	DIP Switch 1	DIP Switch 2
110V	99V-116V	ON	OFF/ON
120V*	108V-127V*	OFF	OFF/ON
230V Models			
Output Voltage	Input Voltage Range	DIP Switch 1	DIP Switch 2
220V	198V-233V	ON	OFF
230V*	207V-243V*	OFF	OFF/ON
240V	216V-254V	ON	ON

*Default position

Communication Options

The UPS is equipped with a USB and a DB-9 communication port. Either the USB port or the DB-9 communication port may be used to monitor the UPS; however, they cannot operate simultaneously.

USB Port

The UPS can communicate with a USB-compliant computer using LanSafe Power Management Software (v5.0.1 or higher). To establish communication between the UPS and a computer:

1. Connect the USB cable to the USB port on the UPS rear panel.

Connect the other end of the USB cable to the USB port on your computer.

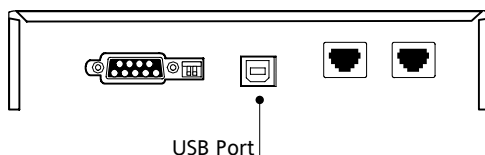


Figure 13. The USB Port

2. Install the LanSafe software and USB drivers according to the instructions provided with the Powerware Software Suite CD.

DB-9 Communication Port

To establish communication between the UPS and a computer, connect your computer to the UPS communication port using the supplied communication cable.

When the communication cable is installed, power management software can exchange data with the UPS. The software polls the UPS for detailed information on the status of the power environment. If a power emergency occurs, the software initiates the saving of all data and an orderly shutdown of the equipment.

The cable pins are identified in Figure 14 and the pin functions are described in Table 2.

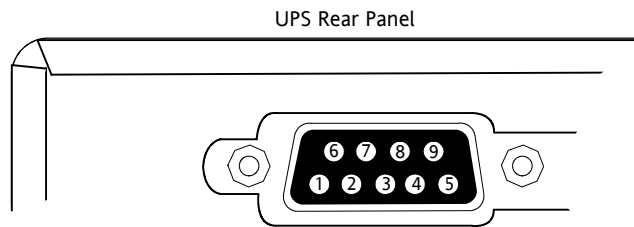


Figure 14. Communication Port

Table 2. Communication Port Pin Assignment

Pin Number	Signal Name	Function	Direction from the UPS
1	Low Batt	Low Battery relay contact; 20 mA, 30 Vdc contact rating	Out
2	TxD	Transmit to external device	Out
3	RxD	Receive from external device	In
4	DTR	PnP (Plug and Play) from external device (tied to Pin 6)	In
5	GND	Signal common (tied to chassis)	—
6	DSR	To external device (tied to Pin 4)	Out
7	—	No Connection	—
8	AC Fail	AC Fail relay contact; 20 mA, 30 Vdc contact rating	Out
9	Power Source	+V (8 to 24 volts DC power)	Out

Network Transient Protector

The Network Transient Protector, shown in Figure 15, is located on the rear panel and has jacks labeled IN and OUT. This feature accommodates a single RJ-45 (10BaseT) network connector.

Low voltage models can also accommodate an RJ-11 telephone connector that provides protection for modems, fax machines, or other telecommunications equipment. As with most modem equipment, it is not advisable to use this jack in digital PBX (Private Branch Exchange) environments.



NOTE *DO NOT connect any telephone or fax/modem equipment to the 230V models; only network protection is available for 230V models.*

1. Connect the input connector of the equipment you are protecting to the jack labeled IN.
2. Connect the network or telephone cable (low voltage models only) to the jack labeled OUT.

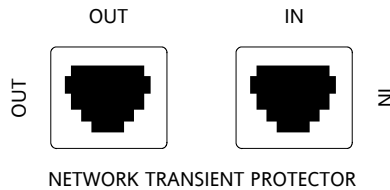


Figure 15. Network Transient Protector

Chapter 6 | UPS Maintenance

This section explains how to:

- ▶ Care for the UPS and batteries
- ▶ Replace the batteries
- ▶ Test new batteries
- ▶ Recycle used batteries

UPS and Battery Care

For the best preventive maintenance, keep the area around the UPS clean and dust-free. If the atmosphere is very dusty, clean the outside of the system with a vacuum cleaner.

For full battery life, keep the UPS at an ambient temperature of 25°C (77°F).

Storing the UPS and Batteries

If you store the UPS for a long period, recharge the battery every 6 months by plugging the UPS into a power outlet. The batteries charge to 90% capacity in approximately 3 hours. However, it is recommended that the batteries charge for 6 to 24 hours after long-term storage.


Check the battery recharge date on the shipping carton label. If the date has expired and the batteries were never recharged, do not use the UPS. Contact your service representative.

Replacing Batteries



NOTE *DO NOT DISCONNECT the batteries while the UPS is in Battery mode.*

With the hot-swappable battery feature, UPS batteries can be replaced easily without turning the UPS off or disconnecting the load.

If you prefer to remove input power to change the battery, press and hold the  button for two seconds and then unplug the UPS.

Consider all warnings, cautions, and notes before replacing batteries.

WARNING



- ▶ Batteries can present a risk of electrical shock or burn from high short circuit current. The following precautions should be observed: 1) Remove watches, rings, or other metal objects; 2) Use tools with insulated handles; 3) Do not lay tools or metal parts on top of batteries.
 - ▶ **ELECTRIC ENERGY HAZARD.** Do not attempt to alter any battery wiring or connectors. Attempting to alter wiring can cause injury.
 - ▶ Replace batteries with the same number and type of batteries as originally installed in the UPS.
-


CAUTION




Pull the battery out onto a flat, stable surface. The battery is unsupported when you pull it out of the UPS.

Use the following steps to replace the batteries:


1. Pull the top left corner forward and remove the front panel.

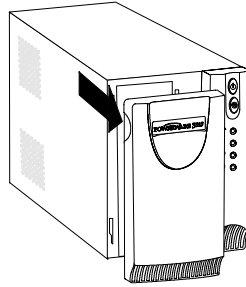


2. Slide up and remove the metal battery cover.

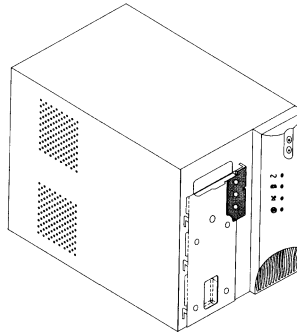


3. **500 VA models.** Disconnect the red battery cable and then disconnect the black battery cable. Pull the battery out onto a flat, stable surface.

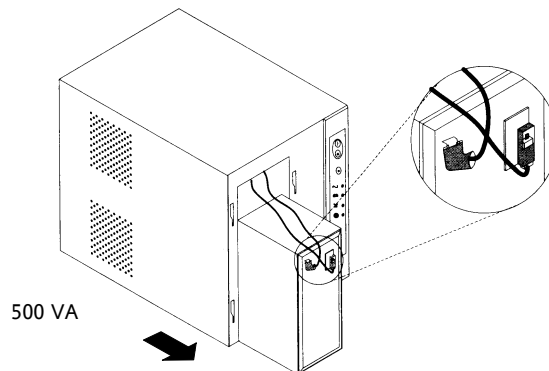

- 4. 750/1000 VA models.** Disconnect the red battery cable and then pull the battery out onto a flat, stable surface. Disconnect the black battery cable to the UPS as shown.

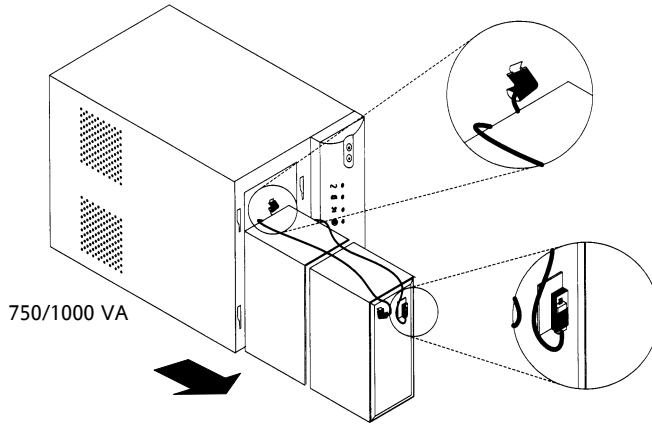

- 5. 1400 VA models.** Disconnect the red battery cable and then pull the battery out onto a flat, stable surface. Remove the battery tie around the black cable set and disconnect the black battery cable to the UPS as shown.

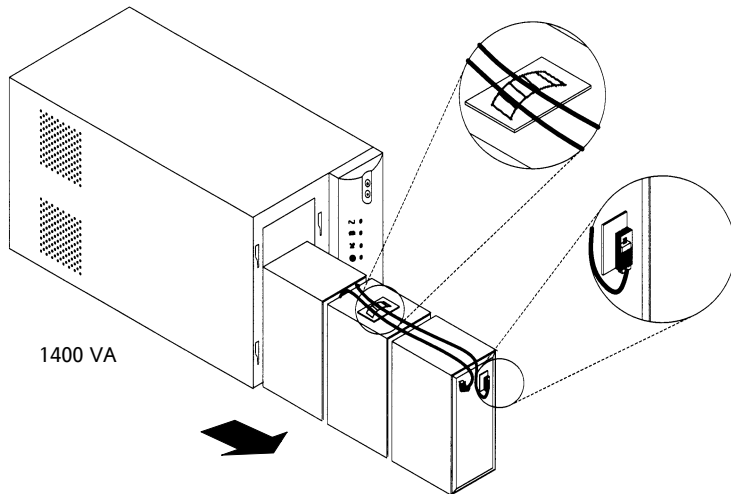





6. Replace the battery. See “Recycling the Used Battery” on page 34 for proper disposal.
7. Connect the black battery cable to the new battery and then connect the red battery cable.
8. Reinstall the battery.
9. Reinstall the metal battery cover and front panel.

Testing New Batteries



NOTE *Allow batteries to charge for 6 to 24 hours before testing.*

Press and hold the  button for three seconds to initiate a self-test. The 15-second test automatically distributes the load to the batteries and tests the battery's performance. While the test is in progress, the indicators cycle through and the alarm sounds. When complete, the UPS returns to Normal mode as indicated by the .

If there is a problem with the battery, the alarm beeps, the  indicator illuminates and the  indicator flashes. Check the battery connections and be sure the battery is fully charged. Call your service representative if the problem persists.

Recycling the Used Battery

Contact your local recycling or hazardous waste center for information on proper disposal of the used battery.



WARNING

- ▶ Do not dispose of the battery or batteries in a fire. Batteries may explode. Proper disposal of batteries is required. Refer to your local codes for disposal requirements.
 - ▶ Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
-



CAUTION

Do not discard the UPS or the UPS batteries in the trash. This product contains sealed, lead-acid batteries and must be disposed of properly. For more information, contact your local recycling or hazardous waste center.

Chapter 7 | Specifications

This section provides the following specifications for the Powerware 5115 models:

- ▶ Dimensions and weights
- ▶ Electrical input and output
- ▶ Environmental and safety
- ▶ Battery

Table 3. Model List and Mechanical

	120V Models	230V Models
UPS Models	PW5115 500 PW5115 750 PW5115 1000 PW5115 1400	PW5115 500i PW5115 750i PW5115 1000i PW5115 1400i
UPS Dimensions (WxHxD)	500 VA: 15.0 x 19.3 x 27.0 cm (5.9" x 7.6" x 10.6") 750–1000 VA: 15.0 x 19.3 x 33.5 cm (5.9" x 7.6" x 13.2") 1400 VA: 15.0 x 19.3 x 39.0 cm (5.9" x 7.6" x 15.4")	
UPS Weights	500 VA: 7.8 kg (17.2 lb) 750 VA: 12.4 kg (27.3 lb) 1000 VA: 12.6 kg (27.8 lb) 1400 VA: 16.8 kg (37.0 lb)	

Table 4. Electrical Input

	120V Models	230V Models
Nominal Voltage	110V, 120V selectable	220V, 230V, 240V selectable
Voltage Range	±20% for nominal voltage at full load	
Nominal Frequency	45–65 Hz, 50/60 Hz auto-sensing	
Efficiency (Normal mode)	95%	
Noise Filtering	Full-time EMI/RFI filtering	
Overcurrent Protection	Resettable input overcurrent protector	N/A
Connections	6-ft, 5-15P power cord (90° angle)	10A, IEC-320 input connector

Table 5. Electrical Output

	120V Models	230V Models
Power Levels (rated at nominal inputs)		500 VA, 320W 750 VA, 500W 1000 VA, 670W 1400 VA, 950W
Power Factor		500 VA, 0.64 750–1400 VA, 0.67
Regulation (Normal mode)	-10% to +6% of nominal voltage	
Regulation (Battery mode), Nominal Voltage $\pm 5\%$	Same as selected nominal input voltage 110V, 120V	Same as selected nominal input voltage 220V, 230V, 240V
Voltage Waveform	Sine wave	
Overcurrent Protection	Inverter saturation current limited	
Output Receptacles	500–750 VA: (4) 5-15 1000–1400 VA: (6) 5-15	500–750 VA: (4) 10A, IEC-320 1000–1400 VA: (6) 10A, IEC-320

Table 6. Environmental and Safety

	120V Models	230V Models
Operating Temperature	Up to 1,500 meters: 0°C to 40°C (32°F to 104°F); UL tested 25°C (77°F) Above 1,500 meters: 0°C to 35°C (32°F to 95°F)	
Transit/Storage Temperature	-15°C to 55°C (5°F to 131°F)	
Relative Humidity	5–95% noncondensing	
Operating Altitude	Up to 3,000 meters above sea level	
Audible Noise	Less than 45 dBA typical	
Surge Suppression	ANSI C62.41 Category A (formerly IEEE 587)	
Safety Conformance	UL 1778; UL 497A; CSA C22.2, No. 107.1	UL 1778, UL 497A (data line only); CSA C22.2, No. 107.1; EN 50091-1-1 and IEC 60950
Safety Markings	UL, cUL	UL, cUL, CE, TÜV, C-Tick
EMC (Class B)	FCC Part 15, ICES-003	EN 50091-2, FCC Part 15, ICES-003

Table 7. Battery

Configuration	500 VA: (1) 12V, 9 Ah internal battery 750 VA: (2) 12V, 7 or 7.2 Ah internal batteries 1000 VA: (2) 12V, 9 Ah internal batteries 1400 VA: (3) 12V, 9 Ah internal batteries
Voltage	500 VA: 12 Vdc 750–1000 VA: 24 Vdc 1400 VA: 36 Vdc
Type	Sealed, maintenance-free, valve-regulated, lead-acid
Charging	Advanced charging for faster recovery; approximately 3 hours to 90% usable capacity at nominal line and no supplementary power supply load
Monitoring	Advanced monitoring for earlier failure detection and warning

Table 8. Battery Run Times (in Minutes)

Load (VA)	Watts	UPS Models by VA Ratings			
		500	750	1000	1400
200	128	17	38	41	58
300	192	11	27	28	41
500	320	5	14	15	28
600	402		9	10	19
750	503		6	8	14
900	603			6	10
1000	670			5	8
1200	804				6
1400	938				5

NOTE Battery times are approximate and may vary depending on the load configuration and battery charge.

Chapter 8 | Troubleshooting

This section explains:

- ▶ UPS alarms and conditions
- ▶ How to silence an alarm
- ▶ Site wiring fault on 120V models
- ▶ Service and support

Audible Alarms and UPS Conditions

The UPS has an audible alarm feature to alert you of potential power problems. Use Table 9 to determine and resolve the UPS alarms and conditions.

Indicator Legend

- Unlit
- Lit
- ⚡ Flashing

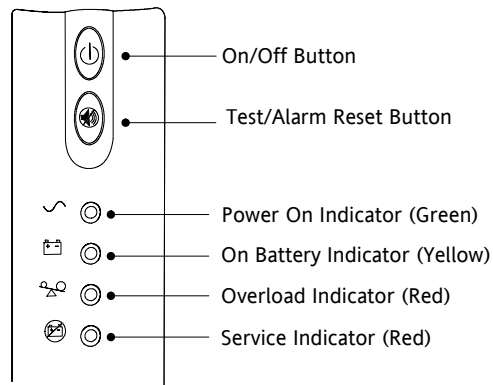



Figure 16. UPS Front Panel






Silencing an Audible Alarm














Before silencing an alarm, check the alarm condition and perform the applicable action to resolve the condition (see Table 9). To silence the alarm for an existing fault, press the  button. If UPS status changes, the alarm beeps, overriding the previous alarm silencing. The alarm does not silence if there is a UPS fault, low battery condition, or if the battery needs to be replaced.















Site Wiring Fault (120V Models Only)

The Site Wiring Fault indicator on the UPS rear panel illuminates if the ground wire connection does not exist or the line and neutral wires are reversed in the line receptacle. This indicator stays on until the condition is resolved. Have a qualified electrician correct the wiring fault. The UPS operates when the indicator is illuminated, but does not provide rated noise and surge suppression.

Table 9. Troubleshooting

Alarm or Condition	Possible Cause	Action
The  indicator is not on; the UPS does not start.	The power cord is not connected correctly.	Check the power cord connections.
	The UPS is in Standby mode.	Press and hold the  button until you hear the UPS beep (approximately two seconds) to supply power to the connected equipment.
	The wall outlet is faulty.	Have a qualified electrician test and repair the outlet.
The UPS operates in Battery mode only, even though normal utility power is present.	The input overcurrent protector is open (120V models only).	Save your work and turn off your equipment. Turn off the UPS. Reduce the load, then press the input overcurrent protector on the UPS rear panel.
The UPS does not provide the expected backup time.	The batteries need charging or service.	Plug the UPS into a power outlet for 24 hours to charge the battery. Press the  button, if the alarm beeps, see “Replacing Batteries” on page 30 to replace the battery. During extended power outages, turn off the UPS after saving your work and shutting down your computer to conserve battery power.
 ●	Normal operation.	None. The UPS is operating in Normal mode and automatically provides consistent voltage with the Buck and Boost feature.
 ● 1 beep every 4 seconds.	The UPS is on battery due to a utility failure.	The UPS is powering your equipment with battery power. Prepare your equipment for shutdown. If this is an extended power outage, save your work and turn off your equipment to conserve battery power.

Alarm or Condition	Possible Cause	Action
 1 beep every 2 seconds.	The battery is running low.	Two minutes or less of battery power remains (depending on load configuration and battery charge). Save your work and turn off your equipment. The alarm cannot be silenced.
 ● 1 beep every 2 seconds.  ●	The UPS is running on battery power because the input voltage is too high or too low.	Correct the input voltage, if possible. The UPS continues to operate on battery until the condition is corrected or the battery is completely discharged. If the condition persists, the input voltage in your area may differ from the UPS nominal. Change the UPS input voltage to match your local voltage (see “Voltage Configuration” on page 25).
 ● 1 beep per second.  ●	Power requirements exceed UPS capacity (overload is greater than 120%) or the load is defective.	The UPS will automatically shut down in 3 minutes. Save your work immediately and turn off your equipment. Turn off the UPS. Remove some of the equipment from the UPS. You may need to obtain a larger capacity UPS.
 ● 1 beep per second.  ●	The UPS is on battery, and the power requirements exceed UPS capacity (overload is greater than 120%) or the load is defective.	Shutdown is imminent (30 seconds). Save your work and turn off your equipment. Turn off and unplug the UPS. Remove some of the equipment from the UPS. Wait at least 5 seconds until all LEDs are off and restart the UPS. You may need to obtain a larger capacity UPS.
 ● Continuous beep. 	Battery test failed.	Check the battery connections and be sure the battery is fully charged. If the  indicator still flashes, see “Replacing Batteries” on page 30 to replace the battery. Call your service representative if the problem persists.
 ● Continuous beep.  ● 	UPS internal temperature is too high.	Shutdown is imminent. Save your work and turn off your equipment. Turn off the UPS. Clear vents and remove any heat sources. Ensure the airflow around the UPS is not restricted. Wait at least 5 minutes and restart the UPS. If the condition persists, contact your service representative.

Alarm or Condition	Possible Cause	Action
 ● Continuous beep.  ●	UPS fan fault (750–1400 VA models only).	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.
 ● 3 beeps every 10 seconds.  ●  ●  ●	Failed attempt to start the UPS on battery.	Plug the UPS into a power outlet for 24 hours to charge the battery. After charging the battery, press and hold the  button for 3 seconds; then check the  indicator. If the  indicator still flashes, see “Replacing Batteries” on page 30 to replace the battery.
 ● Continuous beep.  ●  ●	The output wave is abnormal while the UPS is on battery.	Shutdown is imminent. Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.
 ● Continuous beep.  ●	The output voltage is below or above the limit while the UPS is on battery.	Save your work and turn off your equipment. Turn off the UPS. Contact your service representative.

Service and Support

If you have any questions or problems with the UPS, call your **Local Distributor** or the **Help Desk** at one of the following telephone numbers and ask for a UPS technical representative.

In the United States: **1-800-356-5737** or **1-608-565-2100**
Europe, Middle East, Africa: **+44-17 53 608 700**
Asia: **+852-2830-3030**
Australia: **+61-3-9706-5022**

Please have the following information ready when you call the Help Desk:

- ▶ Model number
- ▶ Serial number
- ▶ Version number (if available)
- ▶ Date of failure or problem
- ▶ Symptoms of failure or problem
- ▶ Customer return address and contact information

If repair is required, you will be given a Returned Material Authorization (RMA) Number. This number must appear on the outside of the package and on the Bill Of Lading (if applicable). Use the original packaging or request packaging from the Help Desk or distributor. Units damaged in shipment as a result of improper packaging are not covered under warranty. A replacement or repair unit will be shipped, freight prepaid for all warrantied units.



NOTE *For critical applications, immediate replacement may be available. Call the **Help Desk** for the dealer or distributor nearest you.*

Two-Year Limited Warranty

Powerware Models 5115 and 5125

WARRANTOR: The warrantor for the limited warranties set forth herein is Powerware Corporation, a Delaware Corporation (“Powerware”).

LIMITED WARRANTY: This limited warranty (this “Warranty”) applies only to the original end-user (the “End-User”) of any Powerware 5115 and 5125 Products (individually and collectively, the “Product”) purchased on or after June 1, 2004 and cannot be transferred. This Warranty applies even in the event that the Product is initially sold by Powerware for resale to an End-User.

LIMITED WARRANTY PERIOD: The period covered by this Warranty for Product installed [and currently located] in the fifty (50) United States, the District of Columbia, and Canada is twenty-four (24) months from the date of purchase.

WHAT THIS LIMITED WARRANTY COVERS: The warrantor warrants that the Product and battery (individually and collectively, the “Warranted Items”) are free from defects in material and workmanship. If, in the opinion of Powerware, a Warranted Item is defective and the defect is within the terms of this Warranty, Powerware’s sole obligation will be to repair or replace such defective item (including by providing service, parts and labor, as applicable), at the option of Powerware.

PROCEDURES FOR REPAIR OR REPLACEMENT OF WARRANTED ITEMS: The Warranted Item will be repaired or replaced at a Powerware site or such other location as determined by Powerware.

If the Warranted Item is to be replaced by Powerware, and the End-User supplies a credit card number or purchase order for the value of the replacement product, Powerware will use commercially reasonable business efforts to ship (via overnight express shipment and at no cost to the End-User) the replacement Warranted Item to the End-User within one (1) business day after Powerware receives notice of the warranty claim. In such case, the End-User must return (at Powerware’s expense) the defective Warranted Item to Powerware in the same packaging as the replacement Warranted Item received by the End-User or as otherwise instructed by Powerware. If Powerware does not receive the defective Warranted Item, Powerware will either charge the End-User’s credit card, or send the End-User an invoice (which the End-User agrees to pay), for the value of the replacement product.

If the Warranted Item is to be replaced by Powerware, but the End-User is unwilling or unable to supply a credit card number or purchase order for the value of the replacement product, Powerware will use commercially reasonable business efforts to ship (via overnight express shipment and at no cost to the End-User) the replacement Warranted Item to the End-User within one (1) business day after Powerware receives the defective product from the End-User.

In any case, Powerware will provide shipping instructions and will pay its designated carrier for all shipping charges for returned of defective equipment and replacement Warranted Items. Any returned Warranted Item or parts that are replaced may be new or reconditioned. All Warranted Items returned to Powerware and all parts replaced by Powerware shall become the property of Powerware.

WHAT THIS LIMITED WARRANTY DOES NOT COVER: This Warranty does not cover any defects or damages caused by: (a) failure to properly store the Product before installation, including the charge of batteries no later than the date indicated on the packaging; (b) shipping and delivery of the Product if shipping is FOB Factory; (c) neglect, accident, abuse, misuse, misapplication, or incorrect installation; (d) repair or alteration not authorized in writing by Powerware personnel or performed by an authorized Powerware Customer Service Engineer or Agent; (e) improper testing, operation, maintenance, adjustment, or any modification of any kind not authorized in writing by Powerware personnel or performed by an authorized Powerware Customer Service Engineer or Agent; or (f) use of the Product under other than normal operating conditions or in a manner inconsistent with the Product's labels or instructions.

This Warranty is not valid if the Product's serial numbers have been removed or are illegible. Any Warranted Items repaired or replaced pursuant to this Warranty will be warranted for the remaining portion of the original Warranty subject to all the terms thereof.

Powerware shall not be responsible for any charges for testing, checking, removal or installation of Warranted Items.

THIS WARRANTY IS THE END-USER'S SOLE REMEDY AND IS EXPRESSLY IN LIEU OF, AND THERE ARE NO OTHER, EXPRESSED OR IMPLIED GUARANTEES OR WARRANTIES (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE, WHICH ARE EXPRESSLY DISCLAIMED).

LIMITATION OF LIABILITY: In no event shall Powerware be liable for any indirect, incidental, special or consequential damages of any kind or type whatsoever, or based on any claim or cause of action, however denominated. Powerware shall not be responsible for failure to provide service or parts due to causes beyond Powerware's reasonable control. In no case will Powerware's liability under this Warranty exceed the replacement value of the Warranted Items.

END-USER'S OBLIGATIONS: In order to receive the benefits of this Warranty, the End-User must use the Product in a normal way; follow the Product's operators and maintenance manual; and protect against further damage to the Product if there is a covered defect.

OTHER LIMITATIONS: Powerware's obligations under this Warranty are expressly conditioned upon receipt by Powerware of all payments due to it (including interest charges, if any). During such time as Powerware has not received payment of any amount due to it for the Product, in accordance with the contract terms under which the Product is sold, Powerware shall have no obligation under this Warranty. Also during such time, the period of this Warranty shall continue to run and the expiration of this Warranty shall not be extended upon payment of any overdue or unpaid amounts.

COSTS NOT RELATED TO WARRANTY: The End-User shall be invoiced for, and shall pay for, all services not expressly provided for by the terms of this Warranty, including without limitation, site calls involving an inspection that determines no corrective maintenance is required. Any costs for replacement equipment, installation, materials, freight charges, travel expenses or labor of Powerware representatives outside the terms of this Warranty will be borne by the End-User.

OBTAINING WARRANTY SERVICE: In the USA, call the Powerware Warranty Service Center at 800-356-5737. Outside of the USA, call your local Powerware sales or service representative, or call the Powerware Warranty Service Center in the USA at 608-565-7200. For comment or questions about this Limited Factory Warranty, write to Powerware Warranty Service Center at Post Office Box 11, N9246 Hwy 80, Necedah, Wisconsin, 54646, USA.

Extended Ten-Year Pro-Rated Limited Warranty

Powerware Models 5115, 5125, 9104, 9120, 9125, 9170, and FERRUPS

WARRANTOR: The warrantor for the limited warranties set forth herein is Powerware Corporation, a Delaware Corporation (“Powerware”).

LIMITED WARRANTY: This pro-rated limited warranty (this “Warranty”) applies only to the original end-user (the “End-User”) of any Powerware 5115, 5125, 5140, 9104, 9120, 9125, 9170, and FERRUPS Products (individually and collectively, the “Product”) and cannot be transferred. This Warranty applies even in the event that the Product is initially sold by Powerware for resale to an End-User.

WHAT THIS WARRANTY COVERS: In addition to the standard Two-Year Limited Warranty covering the applicable Product, the warrantor warrants that the Product will have a service life (defined below) of ten years from the date of purchase (the “Ten Year Service Life”) when used in accordance with the storage, handling, installation, operation and maintenance procedures prescribed in the Product’s Operators and Maintenance Manual. “Service life” means the Product’s ability to deliver at least 80% of its original rated backup time.

If Powerware finds, in its sole discretion, that any Product has not provided the Ten Year Service Life, Powerware will, as its sole obligation and the End-User’s sole remedy for Powerware’s breach of this warranty, repair or replace the Product, at its option, F.O.B. Powerware’s factory, for a charge, payable by the End-User to Powerware pro-rated on the following basis:

The End-User will be allowed a credit against Powerware’s list price of equivalent equipment at the time of return of the Product to Powerware, in proportion to the percentage of Ten Year Service Life remaining at the time of return of the Product to Powerware. In calculating the available credit, the remaining portion of the Ten Year Service Life will be rounded up or down to the nearest whole year. The End-User will be responsible to pay the balance of the list price; and Powerware reserves the right to require payment prior to delivery of the repaired or replacement equipment.

For the avoidance of doubt, Powerware’s responsibilities under this Warranty are as follows:

Years 1-2 - Product repaired or replaced pursuant to terms of Limited Warranty

Years 3-10 - Credit (\$) = Current List Price × $\frac{\text{Years of Unexpired Life}}{10 \text{ Years of Warranted Life}}$

WHAT THIS LIMITED WARRANTY DOES NOT COVER: This Warranty does not cover any defects or damages caused by: (a) failure to properly store the Product before installation, including the charge of batteries no later than the date indicated on the packaging; (b) shipping and delivery of the Product if shipping is FOB Factory; (c) neglect, accident, abuse, misuse, misapplication, or incorrect installation; (d) repair or alteration not authorized in writing by Powerware personnel or performed by an authorized Powerware Customer Service Engineer or Agent; (e) improper testing, operation, maintenance, adjustment, or any modification of any kind not authorized in writing by Powerware personnel or performed by an authorized Powerware Customer Service Engineer or Agent; or (f) use of the Product under other than normal operating conditions or in a manner inconsistent with the Product’s labels or instructions.

This Warranty is not valid: (a) unless the End-User returns to Powerware the Warranty Registration Card within thirty (30) days of purchase; or (b) if the Product’s serial numbers have been removed or are illegible. Any Warranted Items repaired or replaced pursuant to this Warranty will be warranted for the remaining portion of the original Warranty subject to all the terms thereof.

Powerware shall not be responsible for any charges for testing, checking, removal or installation of Warranted Items.

THIS WARRANTY IS THE END-USER'S SOLE REMEDY AND IS EXPRESSLY IN LIEU OF, AND THERE ARE NO OTHER, EXPRESSED OR IMPLIED GUARANTEES OR WARRANTIES (INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE, WHICH ARE EXPRESSLY DISCLAIMED).

LIMITATION OF LIABILITY: In no event shall Powerware be liable for any indirect, incidental, special or consequential damages of any kind or type whatsoever, or based on any claim or cause of action, however denominated. Powerware shall not be responsible for failure to provide service or parts due to causes beyond Powerware's reasonable control. In no case will Powerware's liability under this Warranty exceed the replacement value of the Warranted Items.

END-USER'S OBLIGATIONS: In order to receive the benefits of this Warranty, the End-User must use the Product in a normal way; follow the Product's operators and maintenance manual; and protect against further damage to the Product if there is a covered defect.

OTHER LIMITATIONS: Powerware's obligations under this Warranty are expressly conditioned upon receipt by Powerware of all payments due to it (including interest charges, if any). During such time as Powerware has not received payment of any amount due to it for the Product, in accordance with the contract terms under which the Product is sold, Powerware shall have no obligation under this Warranty. Also during such time, the period of this Warranty shall continue to run and the expiration of this Warranty shall not be extended upon payment of any overdue or unpaid amounts.

COSTS NOT RELATED TO WARRANTY: The End-User shall be invoiced for, and shall pay for, all services not expressly provided for by the terms of this Warranty, including without limitation, site calls involving an inspection that determines no corrective maintenance is required. Any costs for replacement equipment, installation, materials, freight charges, travel expenses or labor of Powerware representatives outside the terms of this Warranty will be borne by the End-User.

OBTAINING WARRANTY SERVICE: In the USA, call the Powerware Warranty Service Center at 800-356-5737. Outside of the USA, call your local Powerware sales or service representative, or call the Powerware Warranty Service Center in the USA at 608-565-7200. Powerware will not accept any product for return, credit or exchange unless expressly authorized by Powerware in writing and delivered FOB Powerware factory. For comments or questions about this Warranty, write to the Powerware Warranty Service Center at Post Office Box 11, N9246 Hwy 80, Necedah, Wisconsin, 54646 USA.

